

AccurateViewTool

Ver2.0

Users Manual

2014/06/11

Menix Co.,Ltd.

Daisuke Miura



AccurateViewTool

Table of contents

AccurateViewTool Overview.....	- 3 -
Description of each function AccurateViewTool	- 3 -
Preparing the command execution environment.....	- 3 -
Overview the Panel and Command.....	- 4 -
At a precise angle perspective change [Accurate]	- 5 -
Perspective changes to the standard direction [Fixed].....	- 7 -
Lower panel button operation.....	- 10 -
Image output settings [Snapshot].....	- 12 -
Setting for the display and run conditions [Setting].....	- 14 -

AccurateViewTool

AccurateViewTool Overview

The [AccurateView], can use the presentation file and assembly parts, to control the rotation of the exact view, the image size specified, it is a tool that allows you to capture export images and easily.

 


Description of each function AccurateViewTool

Preparing the command execution environment

When you open a file or iam · ipt · ipn one of any ribbon panel [View]

- [AccurateView] command will appear in [Menix Co, Ltd.].

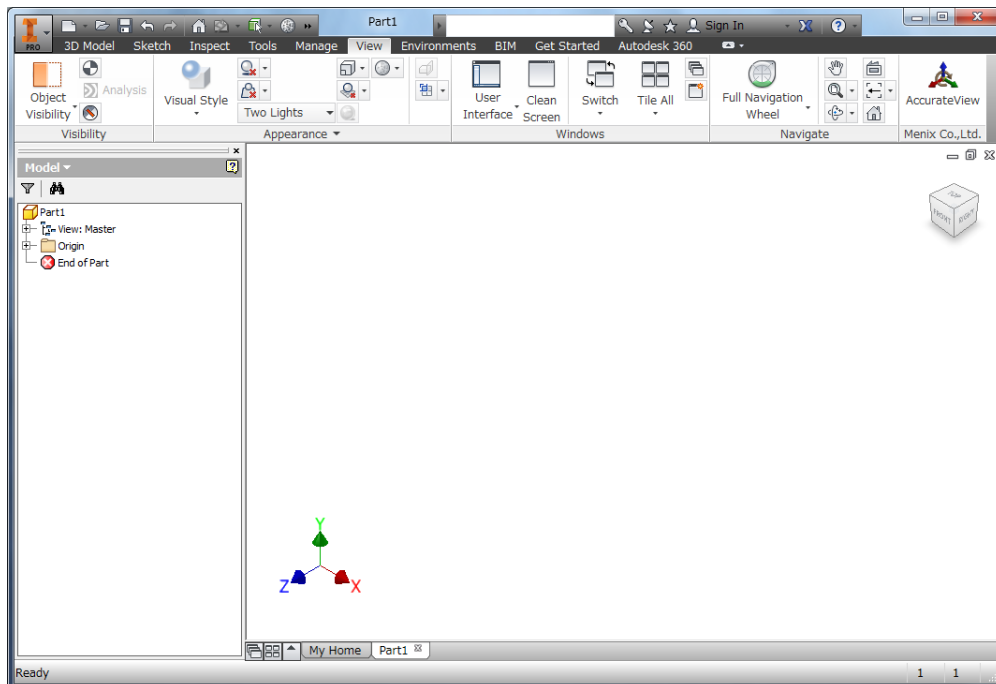

AccurateViewTool

Overview the Panel and Command

If you click on the [AccurateView], panel opens.

Dialog is made up with the control button at the top and bottom TAB four panels.

 
[Accurate] ... Control group to be rotated at a specified angle perspective

[Fixed] ... Group of controls that set the view to the view direction of the fixed form

[Snapshot] ... Set the capture export the image


[Setting] ... Setting of perspective when modifying

Lower panel -Control group to be used in the work before and after the change of perspective

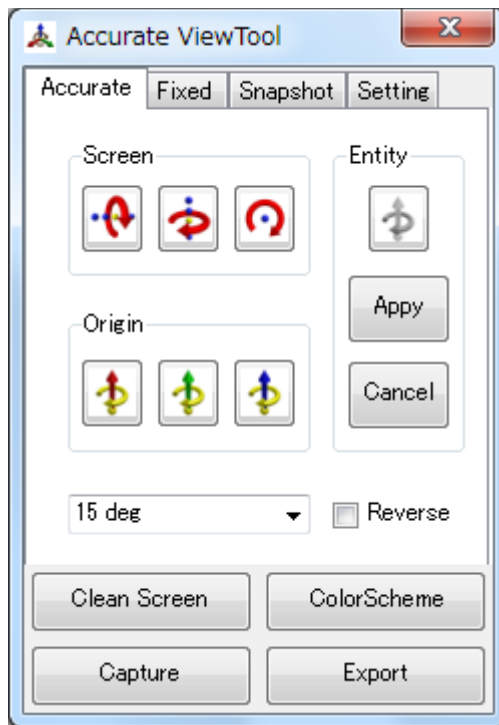


AccurateViewTool

 
At a precise angle perspective change [Accurate]

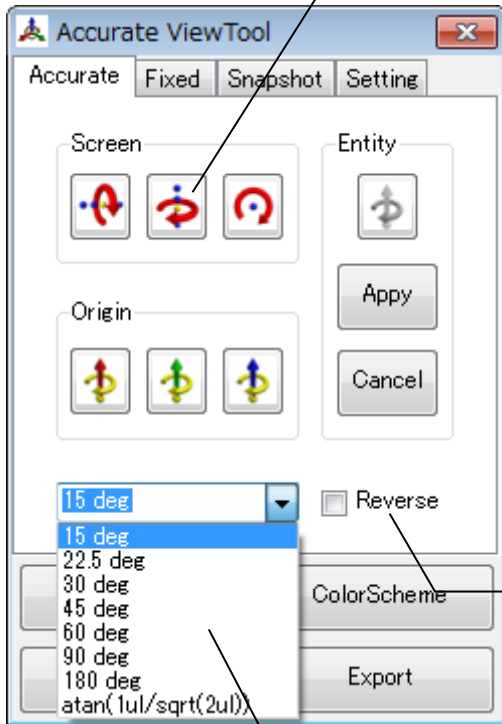


Screen

Try rotating in the direction indicated by the arrow on the screen the current standard viewpoint.

 ... Rotating vertical axis

 ... Rotating horizontal axis

 ... Rotating Axis viewpoint

 
Reverse

can be switched over to reverse the direction of rotation of the runtime. It is in effect the same as entering a negative value in the input box.

Rotation angle input box

The value you enter, you can run the command at the upper panel . It will not run if it is not input. In addition, you can also select from the input candidates LIST.

AccurateViewTool

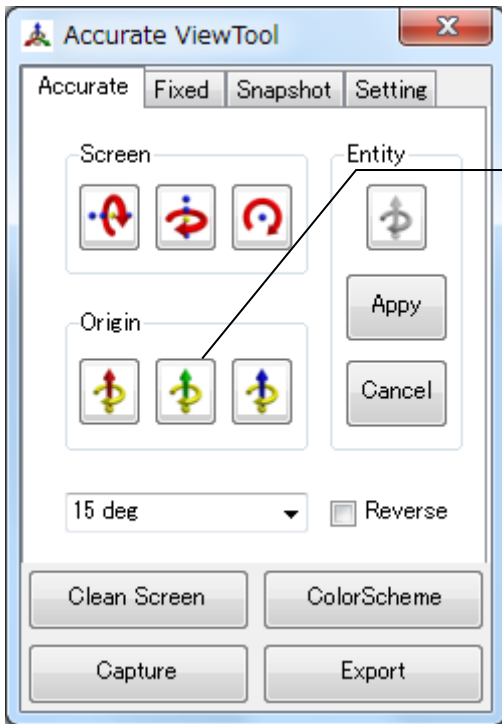

Origin

In relation to the origin axis of the active document, rotate in the direction of the arrow, the point of view.



 
Red ··· X-axis rotation



Green ··· Y-axis rotation



Blue ··· Z-axis rotation

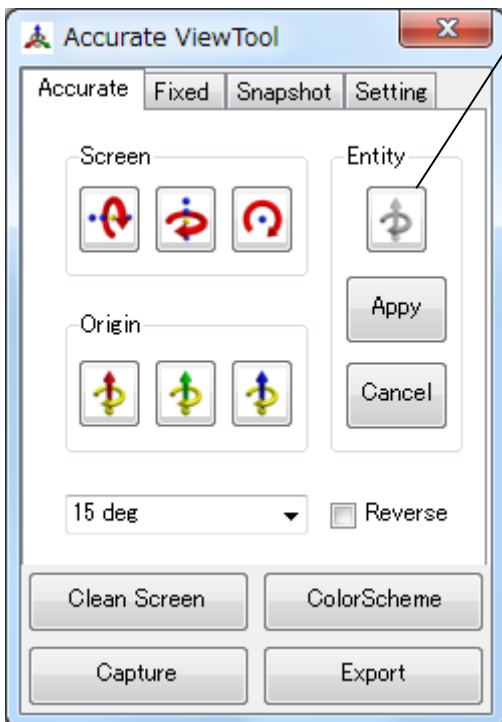

Entity

Geometry selected criteria of the active document, I rotate in the direction of the arrow, the point of view.



··· Linear geometry selection



··· Rotate run

 


··· Select Cancel

★ Command is valid for the part and assembly environment

AccurateViewTool

Perspective changes to the standard direction [Fixed]

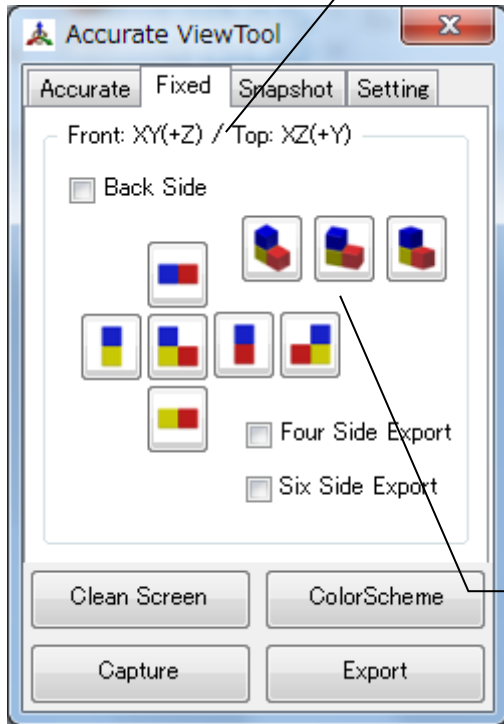

Front: * * * / Top: * * *

Direction the definition that is currently set is displayed. I will do in the [Setting] is set.

Case of the figure, is as follows

Front definition ... XZ(-Y)

Top definition ... XY(+Z)

Perspective projection

 
Switch the perspective projection in each direction based on the front-top face definition.

 ... Isometric view

 ... Axonometric view

 ... Dimetric view

AccurateViewTool

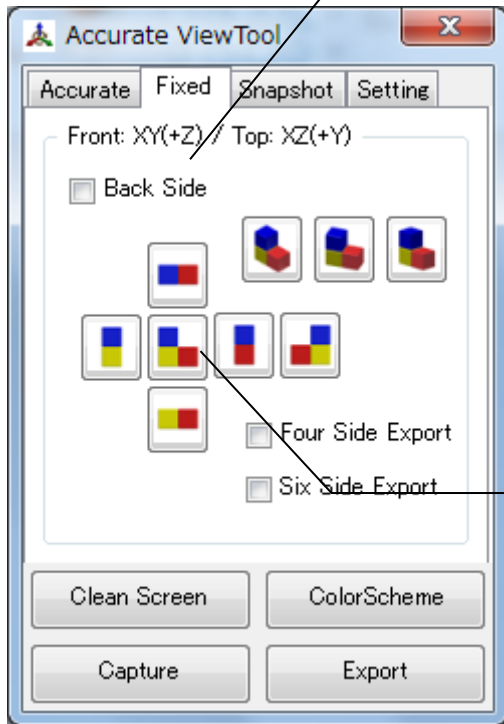

Back Side

Can be switched in the opposite direction to temporarily set of definitions direction that is currently set Front definition, replace the back of the current definition is checked.

Perspective change

Switch the perspective projection in each direction based on the front-top face definition.

Viewpoint on direction is adjusted based on trigonometry.

 ... View Front

 ... View Top

 
 ... View Bottom

 ... View Left

 ... View Right

 ... View Back

AccurateViewTool

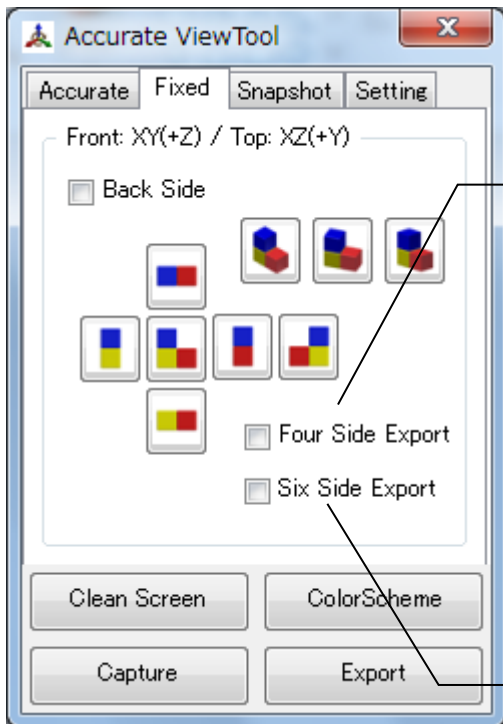

FourSide Export

The output images from the standard direction capture settings

 
From four directions definition of Front · Top · Right · Axonometric, Join output automatic generates the image.

SixSide Export


The output images from the standard direction capture settings

From six directions definition of Front · Top · Bottom · Left · Right · Back, Combine output automatic generates the image.

Example :) FourSideExport options

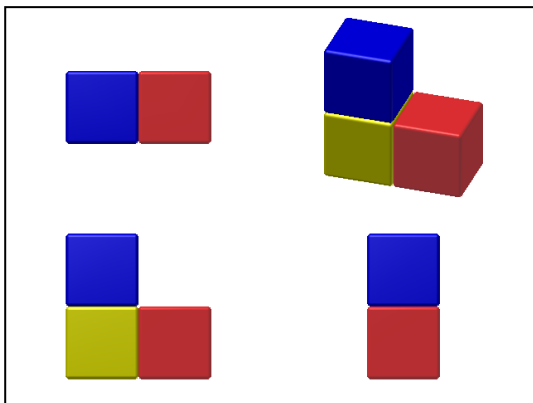


Example :) SixSideExport options

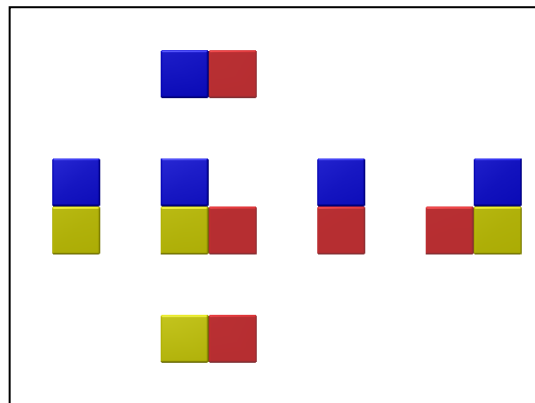 


AccurateViewTool

 Lower panel button operation

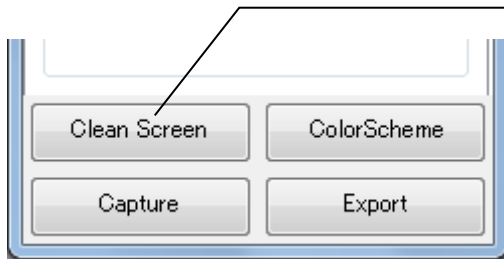


Clean screen

 I want to maximize the window. It behaves the same as the standard commands

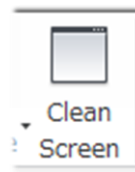

Shortcut

 [Ctrl +0] Clean Screen display

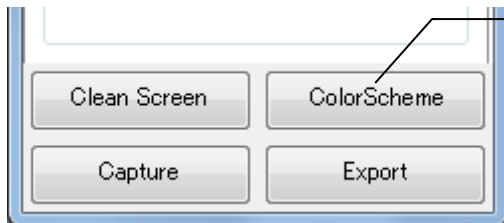


ColorScheme

Change the color scheme
If you click, you can switch on the forward feed color scheme settings.

It is used for background temporary changes while working.

Changes the [Tools]- [Application option]
- [Colors] - [Color scheme]

 
AccurateViewTool

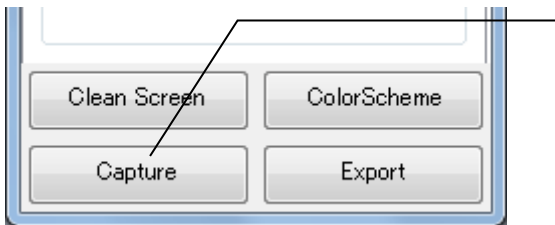

Capture

The active document, I will clip the image generation.

 [SnapShot] settingTab of the image size, background, etc..

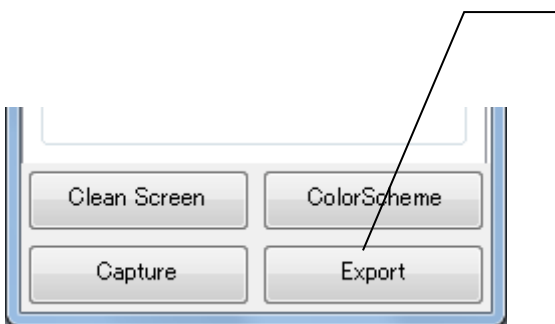

Export

The image generated from the active document of the current, and then save the file to the destination specified.

Format can generate

BMP Files (*.bmp)

GIF Files (*.gif)

JPEG Files (*.jpg)



PNG Files (*.png)

TIFF Files (*.tiff)

[SnapShot] settingTab of the image size, background, etc..

AccurateViewTool

Image output settings [Snapshot]

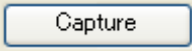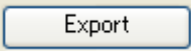 And  the setting of run command.

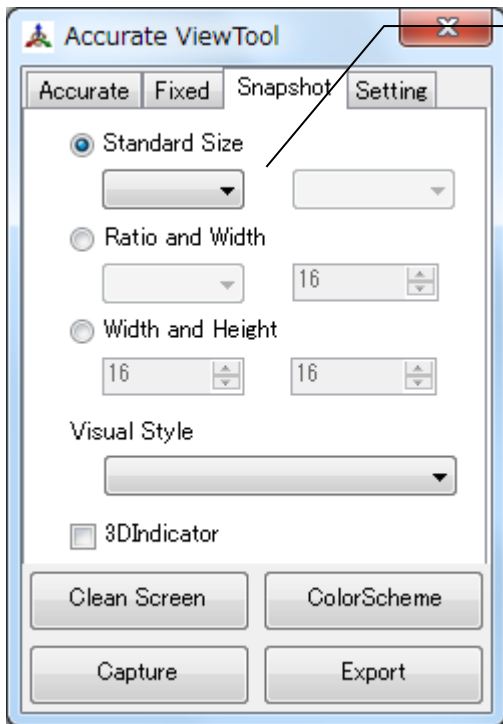 


Image size setting

Set the size of the image generation

Standard Size

Select the image size of the standard

 
★ If blank, definition BOX in the output remains the current screen size

Ratio and Width

Specifies the aspect ratio of the image width (in pixels)

Width and Height


Specifies the width of the image height (in pixels)

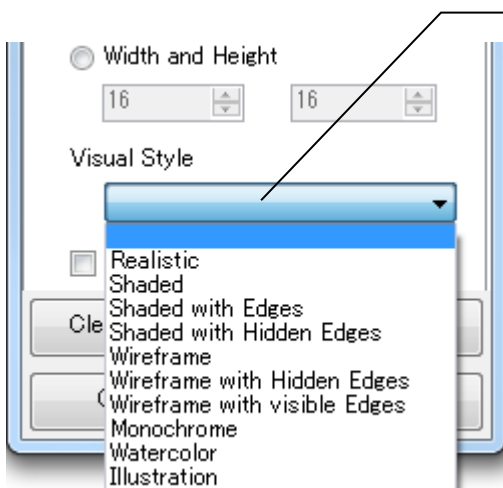


Visual Style

Specify the display style when generating the image. Also, I go back to the previous Visual Style.

 ★ If blank, definition BOX within output in the raw display the current style.

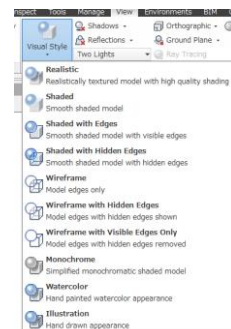


AccurateViewTool

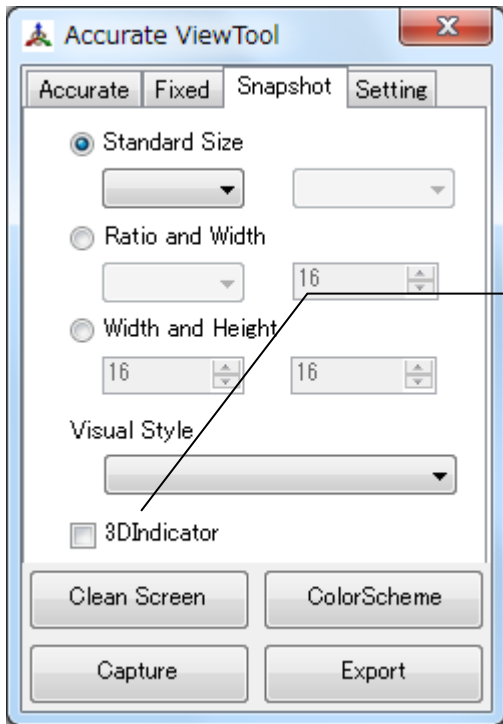 

3DIndicator

 
Only output, and display 3D indicator.
The output process later, return to the setting state of normal.

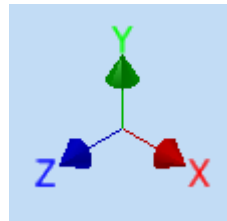

AccurateViewTool

Setting for the display and run conditions [Setting]

 General Setting of [AccurateView]

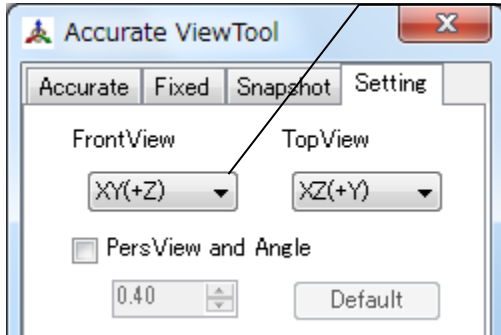

FrontView

Plane definition of front

 
Setting is reflected in the run-time command of Fixed

TopView


Plane definition of top

Setting is reflected in the run-time command of Fixed

★ It is not reflected to the configuration options of standard features ViewCube, setting value that is independent



 ★ Save the settings and closes the dialog

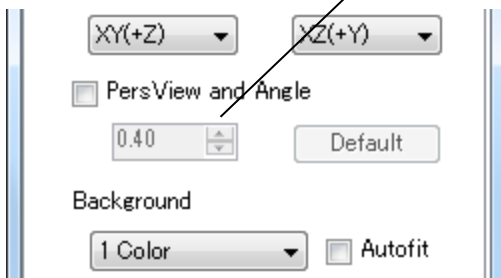


PersView and Angle

Perth display a view of the current
Change the setting value of the perspective view

Default button is pressed, the set value is set to 0.4 of the provisions

★ Setting will be a temporary setting without be saved.

 
AccurateViewTool

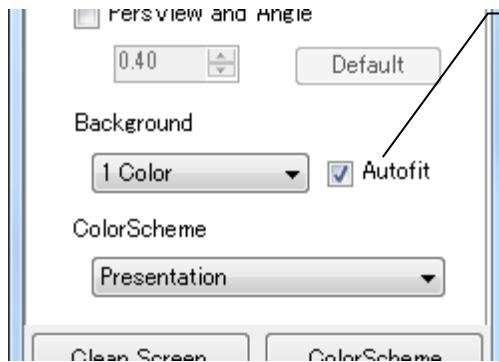

Autofit


After you run the command change , Autofit the View to the model size

 ★ Save the settings and closes the dialog

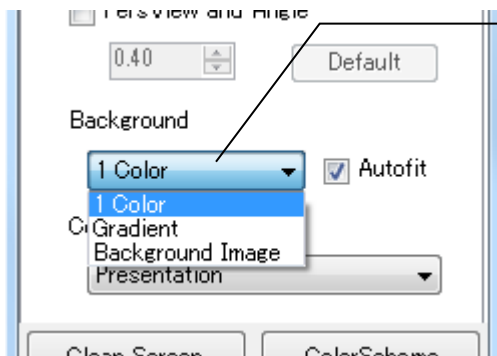

BackgroundType

 Change the type of background color

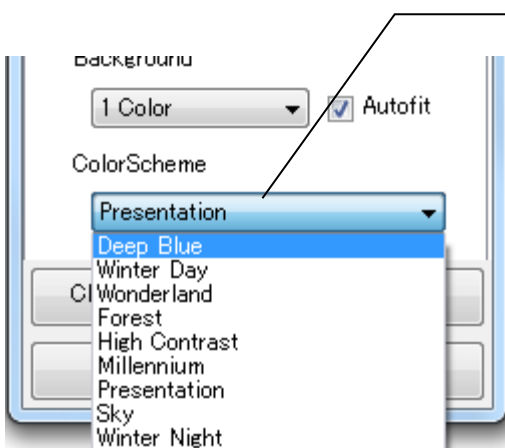

ColorScheme

Change the value that is a drop-down select the setting of the color scheme